




ITEM NO: I222-348WD

Writing Desk w/ Marble Top

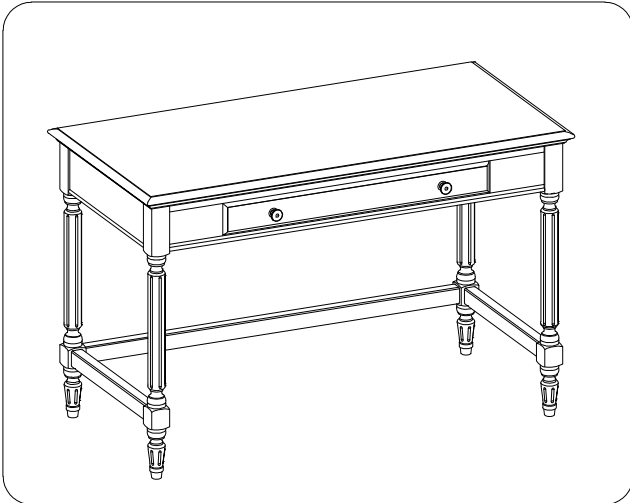



 
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.









TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER 


HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench M4		1 PC
E	Wood Screw #4 x 1-1/4"		6 PCS

COMPONENTS LIST:


No.	Description	Sketch	Quantity
1	Desk Top		1 PC
2	Back Leg		2 PCS
3	Front Leg (Left)		1 PC
4	Front Leg (Right)		1 PC
5	Back Stretcher		1 PC
6	Side Stretcher		2 PCS

FUNCTIONALITY INSTRUCTION

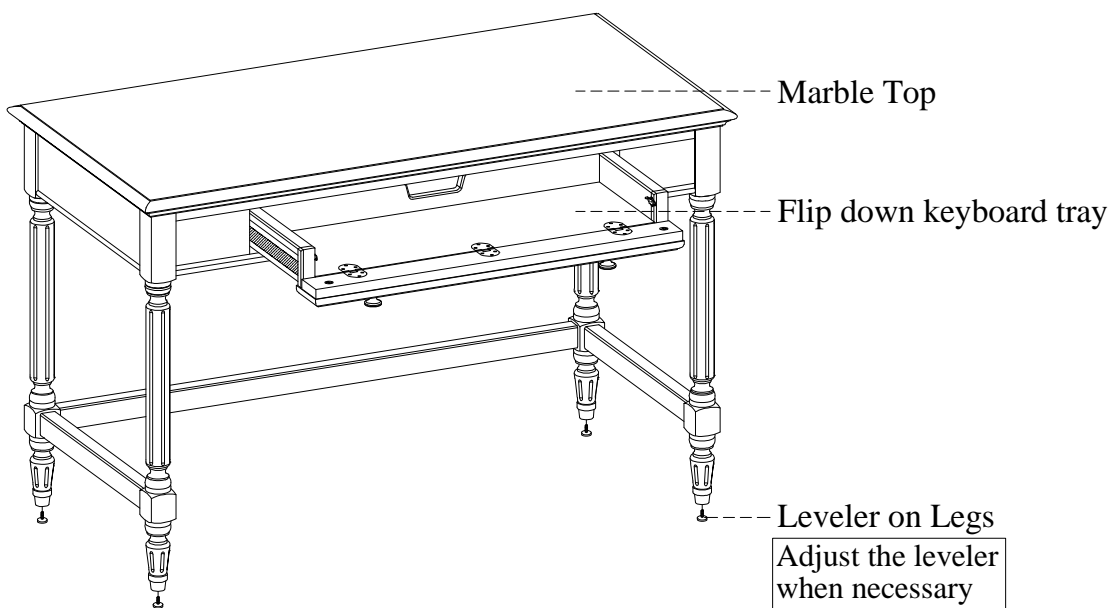

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

 FOR INDOOR USE ONLY




ITEM NO: I222-348WD

Writing Desk w/ Marble Top

STEP 1: Put the desk top face down on a soft surface.

STEP 2: Attach the back legs and the front legs (left & right) to the desk top using by 8 bolts (A), lock washers(B), and flat washers(C). Do not tighten bolts completely.

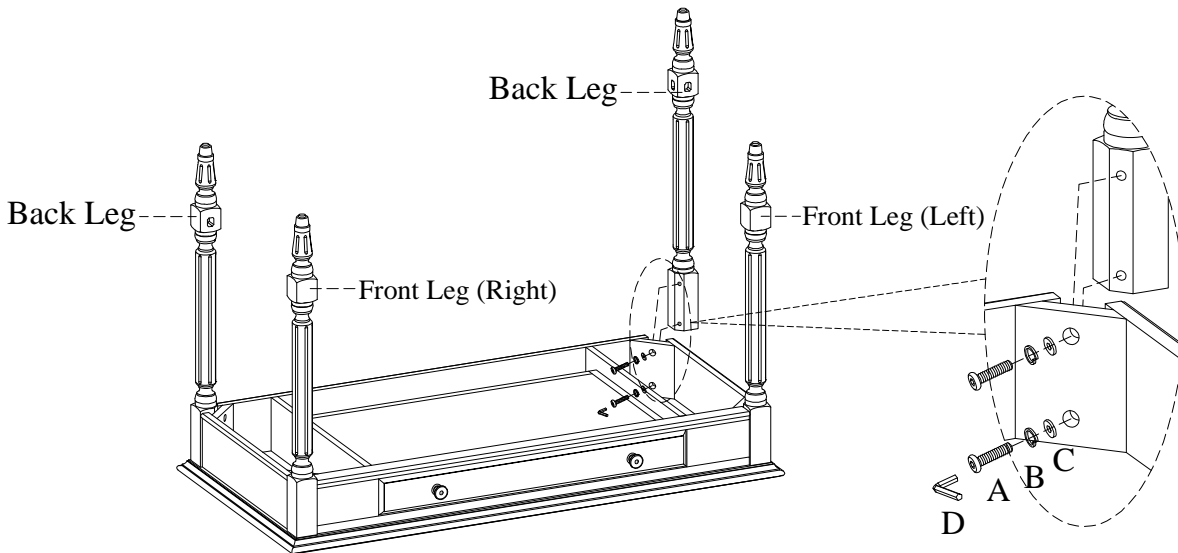

STEP 3: Attach the back stretcher and side stretchers to the front and back legs using 6 wood screws (E). Then use an allen wrench and phillips screwdriver to tighten all the bolts and wood screws. Return the desk to the upright position.

