




ITEM NO: I256-6642S Dining Side Chair w/ Uph Seat (2/Ctn)

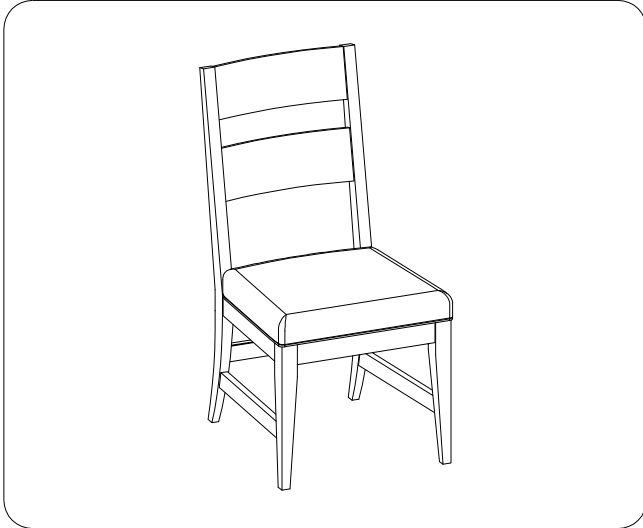




 

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.









**TOOLS REQUIRED (NOT PROVIDED)**

PHILLIPS SCREWDRIVER 


**HARDWARE LIST:**

No.	Description	Sketch	Quantity
A	Hex Bolt Ø5/16" x 2-3/4"		4 PCS
B	Hex Bolt Ø5/16" x 1-3/4"		1 PC
C	Hex Nut Ø5/16"		4 PCS
D	Lock Washer Ø5/16"		9 PCS
E	Flat Washer Ø5/16" x 3/4"		9 PCS
F	Hex Wrench 12mm		1 PC
G	Wood Screw #4 x 2"		4 PCS

 **COMPONENTS LIST:**

No.	Description	Sketch	Quantity
1	Chair Back		1 PC
2	Chair Seat		1 PC
3	Left Front Leg		1 PC
4	Right Front Leg		1 PC
5	Left Side Stretcher		1 PC
6	Right Side Stretcher		1 PC

**FUNCTIONALITY INSTRUCTION**

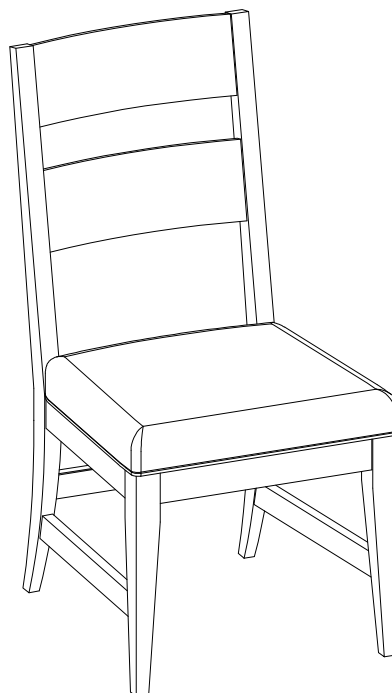

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.


Save these instructions for future reference.

FOR INDOOR USE ONLY





ITEM NO: I256-6642S Dining Side Chair w/ Uph Seat (2/Ctn)

**STEP 1:** Attach the left front leg and right front leg to chair seat by using 4 flat washers(E), lock washers(D) and hex nuts(C) with a hex wrench(F), Do not tighten bolts until STEP 3.

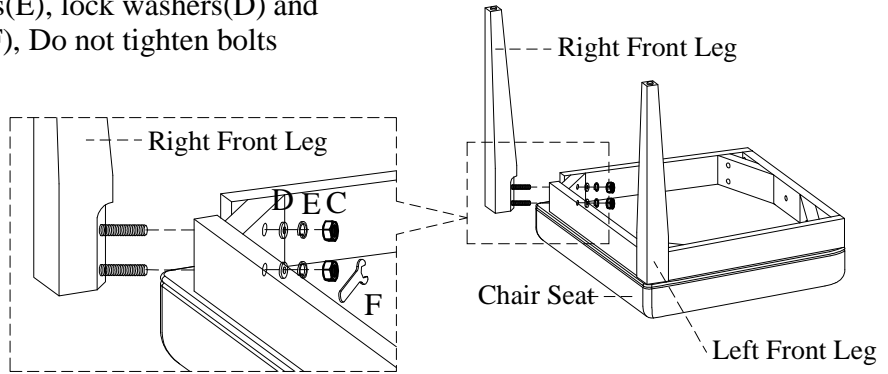

**STEP 2:** Attach the chair seat to chair back by using 4 bolts(A), 1 bolts(B), 5 lock washers(D), 5 flat washers(E) with a hex wrench(F). Do not completely tighten bolts.

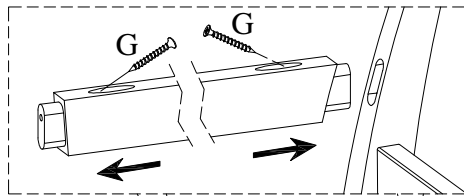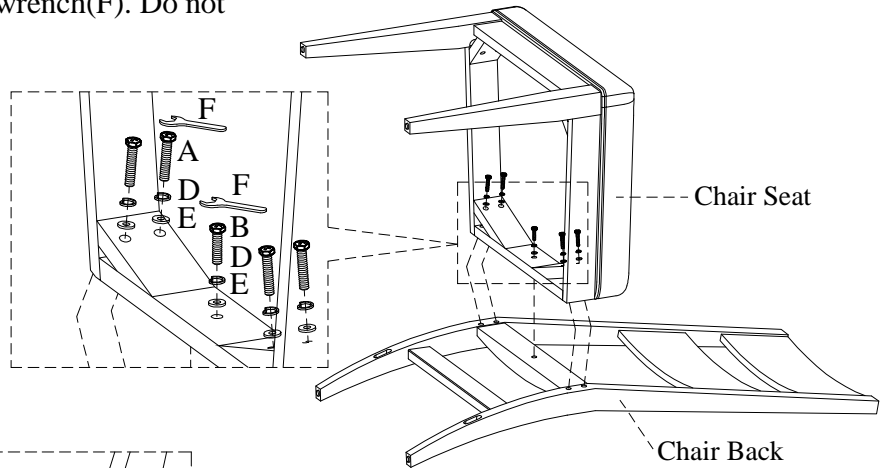

**STEP 3:** Attach the left side stretcher and right side stretcher to the front legs and chair back with wood screws(G). Completely tighten all wood screws and bolts. Turn the assembled chair to the upright position.

