
ASSEMBLY INSTRUCTIONS

ITEM NO: I45-462 Landscape Mirror


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


Option 1: Wall Mount

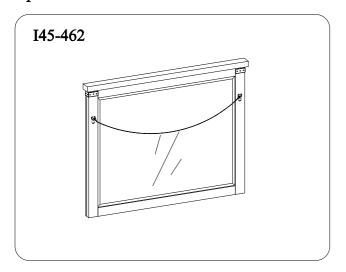

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

Option 2: Dresser/Chesser Mount

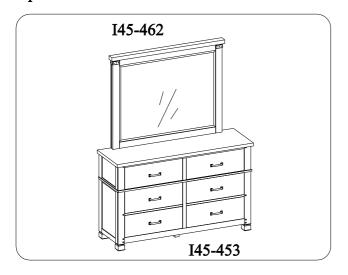

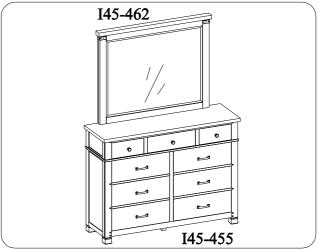

HARDWARE LIST:				
Description	Sketch	Quantity		
Bolt Ø1/4"*1-9/16"	0	8 PCS		
Lock Washer Ø1/4"		8 PCS		
Flat Washer Ø1/4" *3/4"	0	8 PCS		
Allen Wrench 4mm		1 PC		
	Description Bolt Ø1/4"*1-9/16" Lock Washer Ø1/4" Flat Washer Ø1/4" *3/4"	Description Sketch Bolt Ø1/4"*1-9/16" Lock Washer Ø1/4" Flat Washer Ø1/4" *3/4"		

COMPONENTS LIST:				
No.	Description	Sketch	Quantity	
1	Mirror		1 PC	
2	Wood Strip		2 PCS	

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ASSEMBLY INSTRUCTIONS

ITEM NO: I45-462 Landscape Mirror

FOR OPTION 1 (Wall Mount)


STEP 1: After attaching nail/hanger to wall, place wire over nail/hanger and slowly lower the mirror into place. Make sure the wire catches on the nail/hanger.

Note: Ensure the nail/hanger is in a wall stud or wall solid enough to support mirror.

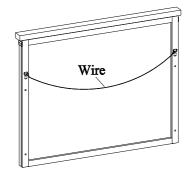

FOR OPTION 2 (Dresser/Chesser Mount)

STEP 1: Attach the wood strips to the outer set of threaded inserts on the dresser or chesser by using 4 bolts(A), lock washers(B), and flat washers(C). Do not tighten bolts completely.

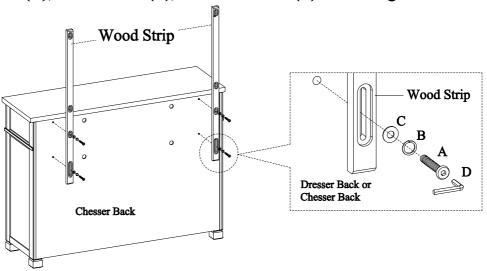

STEP 2: Attach the wood strips to the mirror by using 4 bolts(A), lock washers(B), and flat washers(C). Tighten all bolts on dresser or chesser and mirror with Allen wrench.

