


ASSEMBLY INSTRUCTIONS

ITEM NO: I540-6600S Dining Side Chair

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

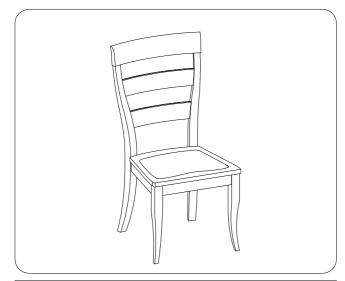


TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST:				
No.	Description	Sketch	Quantity	
Α	Bolt Ø5/16" x 3"	9	4 PCS	
В	Bolt Ø5/16" x 2"	0	4 PCS	
C	Bolt Ø1/4" x 1-1/2"	0	1 PCS	
D	Lock Washer Ø5/16"		9 PCS	
Е	Flat Washer Ø5/16" x 3/4"	9	9 PCS	
F	Allen Wrench 4mm		1 PC	

COMPONENTS LIST:					
No.	Description	Sketch	Quantity		
1	Chair Back		1 PC		
2	Chair Seat		1 PC		
3	Front Leg		2 PCS		

FUNCTIONALITY INSTRUCTION

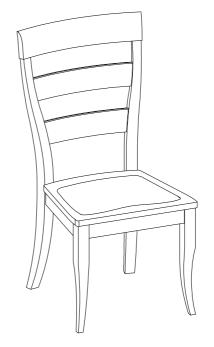

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


FOR INDOOR USE ONLY



ASSEMBLY INSTRUCTIONS

ITEM NO: I540-6600S Dining Side Chair

<u>STEP 1:</u> Attach the front legs to chair seat by using 4 bolts(B), lock washer(D), flat washer(E) with an allen wrench(F).

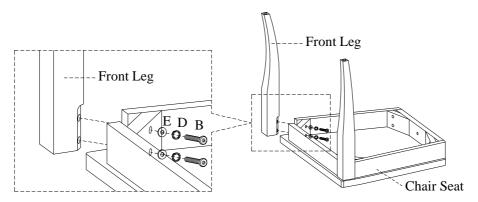

STEP 2: Attach the chair seat to chair back by using 4 bolts(A), 1 bolts(C), 5 lock washer(D), 5 flat washer(E) with an allen wrench(F) tighten all bolts. Turn the assembled chair to the upright position.

