

# ASSEMBLY INSTRUCTIONS





Page 1/2


ah

## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: ICB-6252-BCH/BLK Counter Rect. Table w/1-24" Btr Fly Leaf

HARDWARE PACK				COMPONENT LIST	
A		Bolt (Ø5/16"*55mm)	8PCS	Table Top	1 Pc
B		Lock Washer (Ø5/16")	8PCS	Leg	4 Pcs
C		Flat Washer (Ø5/16")	8PCS		
D		Allen Wrench	1PC		

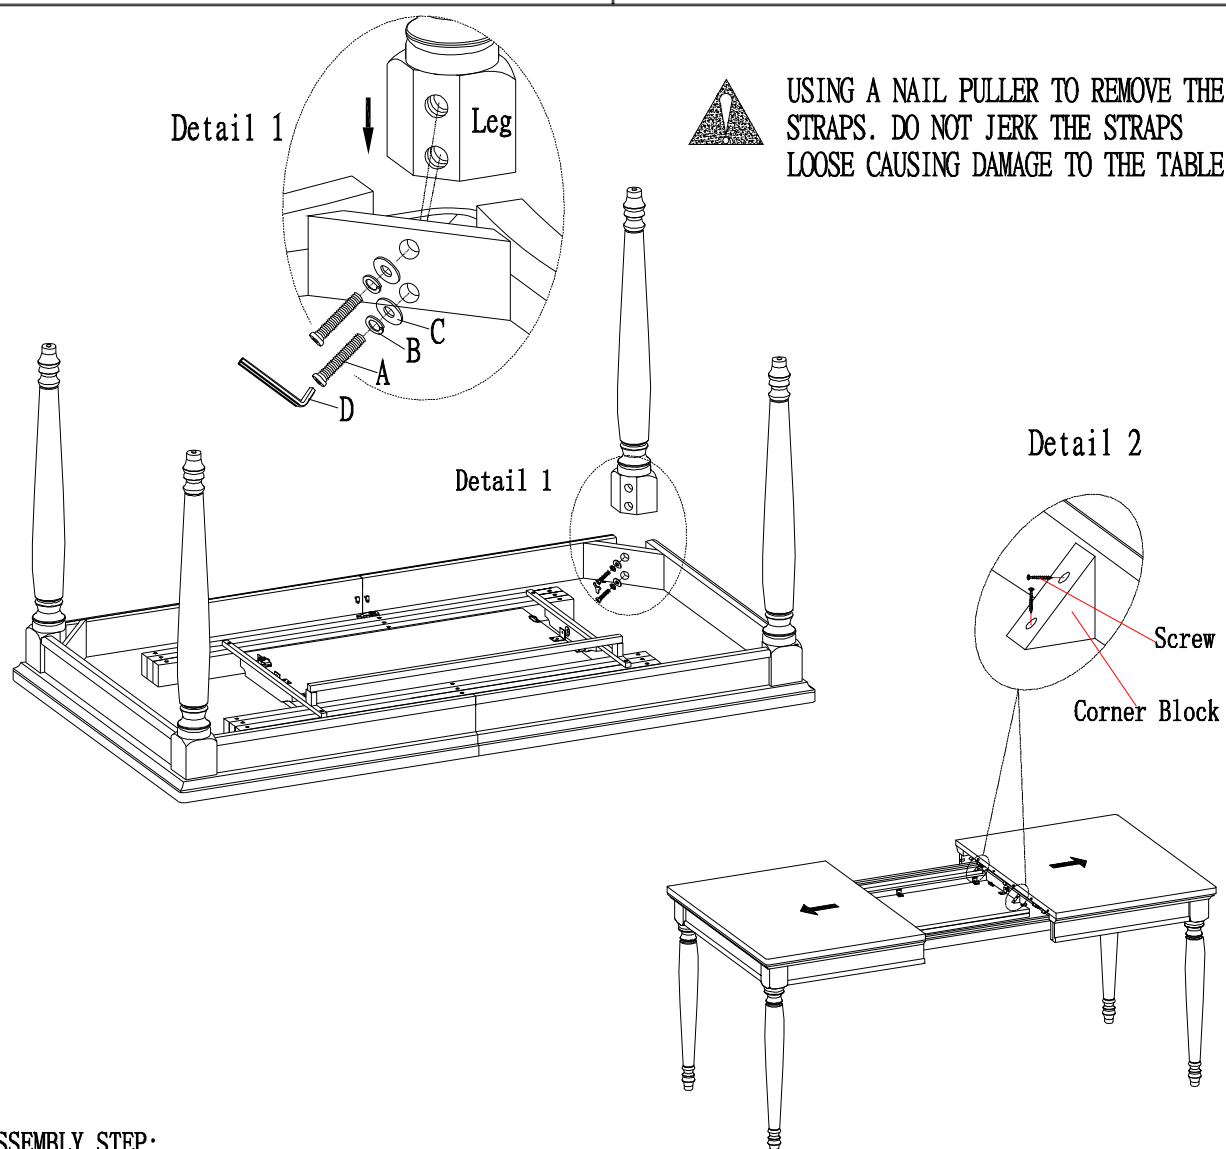

### ASSEMBLY STEP:

1. Put the table top upside down on a soft, clean surface.
2. Set the leg in the corner of the table top. Align the holes in the corner block of table top with the threads in the legs. Attach the legs to the table top with bolts(2 pcs each leg), Lock washers and Flat washers and tighten with Allen wrench. See detail 1.
3. Set the table upright, open the table top and take off the 4 corner blocks before using the table. See detail 2.

MADE IN VIETNAM

2011-10-13

# ASSEMBLY INSTRUCTIONS


Page 2/2

ah

## aspenhome®


Distributed by Furniture Values International, LLC

ITEM NO: ICB-6252-BCH/BLK Counter Rect. Table w/1-24" Btr Fly Leaf

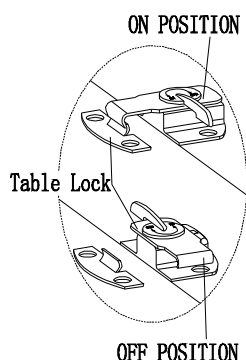


### Caution


Do not catch your hand between the leaf and slide when opening and closing. Injury may occur. Please flip up the aprons first to prevent damage to the aprons' surface.

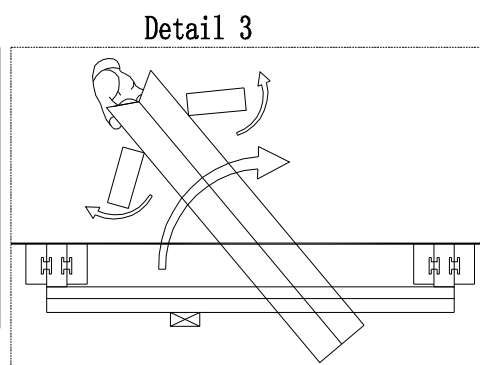


CAUTION: LIFT TABLE LEAF THIS SIDE

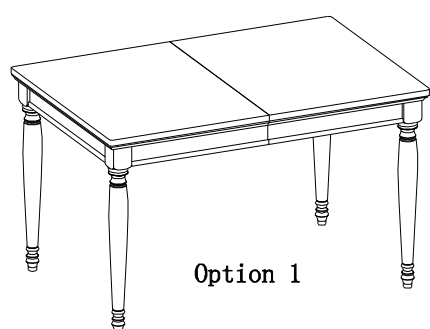


Option 1

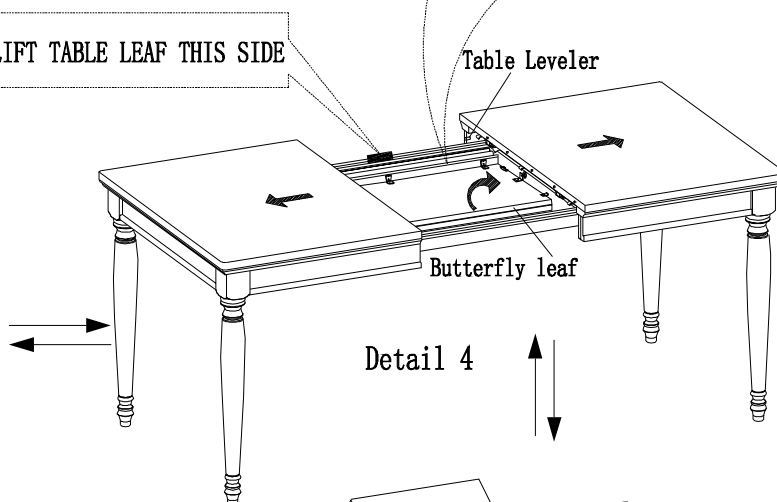

Detail 4

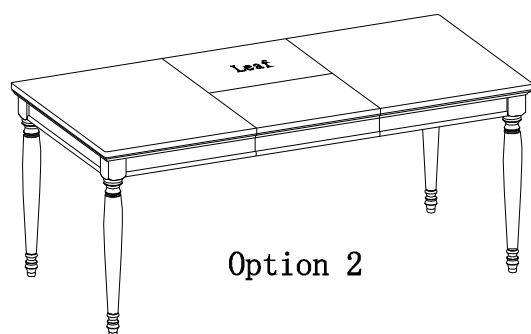

Option 2

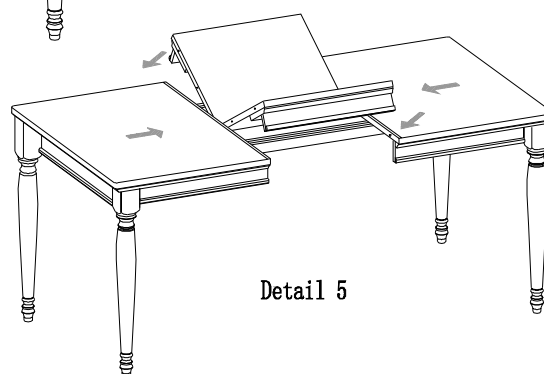

Detail 5

If you prefer to use this table as Option 2, please proceed as the following steps:

1. Make the table locks under the table top at the OFF position. And pull the table top to both sides out completely.
2. Unfold the butterfly leaf as detail 4 & 5, need to be careful that do not damage the hinges and wood surfaces of the leaves.
3. push the table top until the table top fully closed. Make the table locks at the ON position.

MADE IN VIETNAM

2011-10-13


# ASSEMBLY INSTRUCTIONS

Page 1/2

ah

**aspenhome**

Distributed by Furniture Values International, LLC

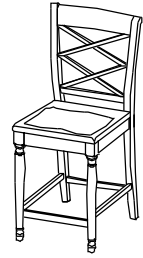

ITEM NO: ICB-6671S-BCH/BLK Counter Height Double X Chair(2/Carton)

## HARDWARE PACK




A	3" Bolt (Ø1/4")	4 Pcs	D	Lock Washer (Ø1/4")	10 Pcs
B	2 1/2" Bolt (Ø1/4")	4 Pcs	E	Flat Washer (Ø1/4")	10 Pcs
C	1 1/2" Bolt (Ø1/4")	2 Pcs	F	Allen Wrench	1 Pc
			G	Wood Screw	6 Pcs

## COMPONENTS LIST

Chair Back	1 Pc	Chair Seat	1 Pc
Front Leg	2 Pcs	Left side stretcher	1 Pc
Front Stretcher	1 Pc	Right side stretcher	1 Pc



ASSEMBLY REQUIRES A STANDARD PHILIPS HEAD SCREWDRIVER, NOT INCLUDED.

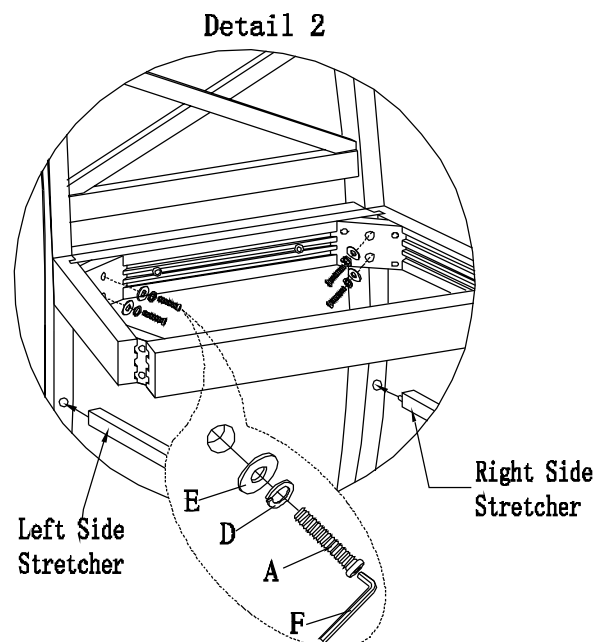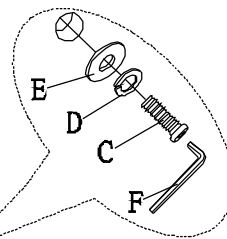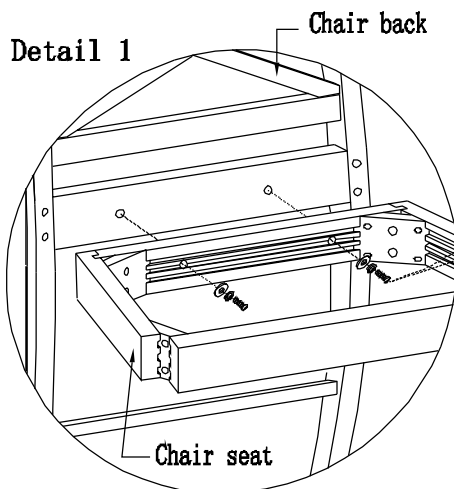

1. Open the box. Take out each part and the hardware pack.
2. Place the chair back on a padded area, and assemble the chair seat to the chair back (as shown in detail 1 & 2), then put the left and right side stretchers to the chair back. Do not tighten the bolts completely.

MADE IN VIETNAM

2010-03-16


# ASSEMBLY INSTRUCTIONS

Page 1/2


ah

## aspenhome



Distributed by Furniture Values International, LLC

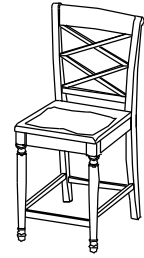

ITEM NO: ICB-6671S-BCH/BLK Counter Height Double X Chair(2/Carton)

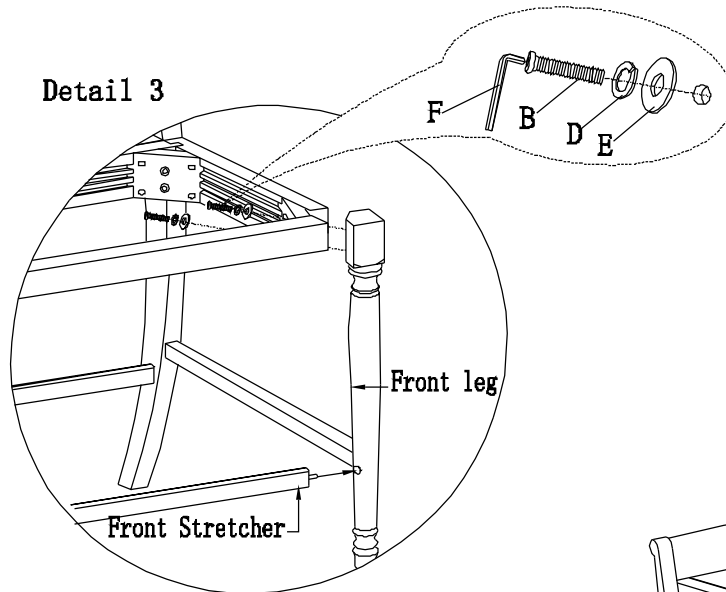

Detail 4

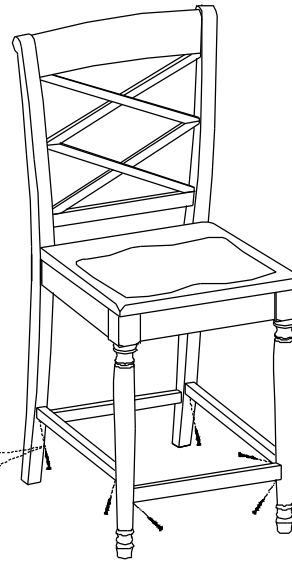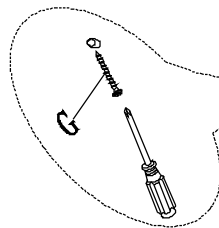

Not tighten each bolt too much  
before screwing stretchers

3. Assemble the front leg to the chair seat as detail 3(no need to tighten bolts), then place the front stretcher to the chair front leg. Do not tighten the bolts completely.
4. Attach the side stretcher, front stretcher to the chair back and chair front leg using wood screws as shown in detail 4.
5. Then turn the chair onto its feet on a level surface, make sure all four legs are flat and level against the flat surface, now tighten the bolts completely so that it will not come loose.
6. After all assembly steps, if the gap is too wide between the seat and the chair back, take off the wood screws which have been locked under the seat. And adjust the seat in an ideal position, then re-attach its.

MADE IN VIETNAM

2010-03-16